

Instructions



Memory Erasure and Nonvolatile Memory Parts List TDS3000 & TDS3000B Series Digital Phosphor Oscilloscopes 071-1722-00

Revision A

www.tektronix.com



071172200

Copyright © Tektronix. All rights reserved. Licensed software products are owned by Tektronix or its subsidiaries or suppliers, and are protected by national copyright laws and international treaty provisions.

Tektronix products are covered by U.S. and foreign patents, issued and pending. Information in this publication supercedes that in all previously published material. Specifications and price change privileges reserved.

TEKTRONIX, TEK, and TekSecure are registered trademarks of Tektronix, Inc.

Contacting Tektronix

Tektronix, Inc.
14200 SW Karl Braun Drive
P.O. Box 500
Beaverton, OR 97077
USA

For product information, sales, service, and technical support:

- In North America, call 1-800-833-9200.
- Worldwide, visit www.tektronix.com to find contacts in your area.

Memory Erasure and Memory Parts List

The standard TDS3000 and TDS3000B Series instruments contain a proprietary architecture based on a PowerPC and the VxWorks operating system. Instrument code and calibration settings reside in FLASH memory.

Instrument setups and reference waveforms can be stored internally in FLASH or on the internal floppy disk drive.

Instrument code can be updated by the user from floppy disks. The latest firmware is available on www.tektronix.com. Loading firmware does not overwrite instrument calibration settings. Loading new firmware does not guarantee overwriting the instrument setups and reference waveforms. To guarantee FLASH memory erasure, use the TekSecure function.

If you have any questions, contact the Tektronix Technical Support Center at <http://www.tektronix.com/support>.

Memory Erasure

Floppy disk drives are standard on TDS3000 and TDS3000B models. Removed floppy disks can be stored or destroyed.

To erase confidential data in the FLASH memory on your oscilloscopes, use the TekSecure function. The TekSecure function does the following:

- Replaces all waveforms in all reference memories with null sample values
- Replaces the current front-panel setup and all stored setups with the default factory setup values
- Calculates the checksums of all reference waveform memory and setup memory locations to verify successful completion of waveform and setup erasure
- Displays a dialog indicating whether the secure erase was successful or unsuccessful

NOTE. *TekSecure does not erase or change factory calibration constants or Ethernet settings.*

To use the TekSecure function to erase FLASH memory:

1. Push the front-panel **UTILITY** button.
2. Push the **System** bottom bezel button until **Config** is selected.
3. Push the **TekSecure Erase Memory** bottom bezel button.
4. Push the **OK Erase Setup & Ref Memory** side bezel button.
5. Power off the oscilloscope; then power on the oscilloscope to complete the process.

Disable LAN Ethernet Connectivity (TDS3000 Series with TDS3EM Module, and All TDS3000B Models)

To disable LAN Ethernet connectivity:

1. Push the front-panel **UTILITY** button.
2. Push the **System** bottom bezel button until **I/O** is selected.
3. Push the **Ethernet Network Settings** bottom bezel button.
4. Push the **Change Instrument Settings** side bezel button.
5. Clear all settings. If you need to restore network connectivity at a later date, make sure to write down all setting values before clearing them.
6. Push the **OK Accept** side bezel button.

The LAN system is disabled and no longer allows data traffic in or out.

Memory Parts Lists

The memory parts used in the TDS3000 and the TDS3000B series oscilloscopes are shown in the following tables.

Table 1: TDS3000 Series Memory Parts (Board Numbers 679-4077-XX and 679-4078-XX)

| Part number | Reference designator | Description | Use |
|-------------|----------------------|---|---|
| 156-7633-XX | U540 | IC, MEMORY; CMOS, SRAM;128K X 18, SYNCHRONOUS, 10NS | Synchronous SRAM: holds the display image. |
| 156-7633-XX | U550 | IC, MEMORY; CMOS, SRAM;128K X 18, SYNCHRONOUS, 10NS | Synchronous SRAM: holds the live acquisition waveforms. |
| 156-7633-XX | U560 | IC, MEMORY; CMOS, SRAM;128K X 18, SYNCHRONOUS, 10NS | Synchronous SRAM: holds the live acquisition waveforms. |
| 156-7951-00 | U610 | IC, Memory: CMOS, Flash; 2M X 8 /1M X 16, 3.0 ONLY, Bottom Sected | FLASH: stores the instrument code, calibration constants, reference waveforms, and instrument setups. |
| 156-7951-XX | U620 | IC, Memory: CMOS, Flash; 2M X 8 /1M X 16, 3.0 ONLY, Bottom Sected | FLASH: stores the instrument code, calibration constants, reference waveforms, and instrument setups. |
| 156-4751-XX | U640 | IC, MEMORY; CMOS, NVRAM;2K X 8, 150NS, INTERNAL BATTERY, W/CLOCK, Y2K, 3.3V | NVRAM: stores date format, RS-232 settings, and language choice. |
| 156-7137-XX | U650 | IC, MEMORY; CMOS;SDRAM;2MEG X 8, SYNC DRAM, 3.3V, 100MHZ | Synchronous DRAM: holds the instrument code and data during operation. |
| 156-7137-XX | U660 | IC, MEMORY; CMOS;SDRAM;2MEG X 8, SYNC DRAM, 3.3V, 100MHZ | Synchronous DRAM: holds the instrument code and data during operation. |
| 156-7137-XX | U670 | IC, MEMORY; CMOS;SDRAM;2MEG X 8, SYNC DRAM, 3.3V, 100MHZ | Synchronous DRAM: holds the instrument code and data during operation. |
| 156-7137-XX | U680 | IC, MEMORY; CMOS;SDRAM;2MEG X 8, SYNC DRAM, 3.3V, 100MHZ | Synchronous DRAM: holds the instrument code and data during operation. |

Table 2: TDS3000B Series Memory Parts (Board Numbers 679-6006-XX and 679-6009-XX)

| Part number | Reference designator | Description | Use |
|-------------|----------------------|--|---|
| 156-7633-XX | U540 | IC, MEMORY; CMOS, SRAM;128K X 18, SYNCHRONOUS, 10NS | Synchronous SRAM: holds the display image. |
| 156-7633-XX | U550 | IC, MEMORY; CMOS, SRAM;128K X 18, SYNCHRONOUS, 10NS | Synchronous SRAM: holds the live acquisition waveforms. |
| 156-7633-XX | U560 | IC, MEMORY; CMOS, SRAM;128K X 18, SYNCHRONOUS, 10NS | Synchronous SRAM: holds the live acquisition waveforms. |
| 156-7951-00 | U610 | IC, Memory: CMOS, Flash; 2M X 8 /1M X 16, 3.0 ONLY, Bottom Sector | FLASH: stores the instrument code, calibration constants, reference waveforms, and instrument setups. |
| 156-7951-XX | U620 | IC, Memory: CMOS, Flash; 2M X 8 /1M X 16, 3.0 ONLY, Bottom Sector | FLASH: stores the instrument code, calibration constants, reference waveforms, and instrument setups. |
| 156-4751-XX | U640 | IC, MEMORY; CMOS, NVRAM;2K X 8, 150NS, INTERNAL BATTERY, W/CLOCK, Y2K, 3.3V | NVRAM: stores date format, RS-232 settings, and language choice. |
| 156-8158-XX | U670 | IC, MEMORY; CMOS, SDRAM;512K X 32 X 4 BANKS, 64M, SYNCHRONOUS, 3.3V, 125 MHZ | Synchronous DRAM: holds the instrument code and data during operation. |

Application Module Memory Part List

The memory part used in the TDS3AAM, TDS3FFT, TDS3LIM, TDS3TMT, TDS3TRG, and TDS3VID application modules is shown in the following table.

Table 3: Application Module Memory Part (Board Number 679-4489-XX)

| Part number | Reference designator | Description | Use |
|-------------|----------------------|---|--|
| 156-6272-XX | U1 | IC, MEMORY; CMOS, EEPROM; 256 X 8, SERIAL | EEPROM: holds the application module code. |